



Tech Bulletin Ref: 8.13.14

Kundel Industries, Inc. ("Kundel") continuously strives to provide the best products and service in the industry. In our constant effort to improve Kundel products, we have designed and developed a redundant safety attachment mechanism for the bridge assembly of the K-Trac® Crane Series to further enhance its strength, durability and safety. The new attachment mechanism is being provided in a kit which includes the following items listed below for installation as shown in the images to the right.

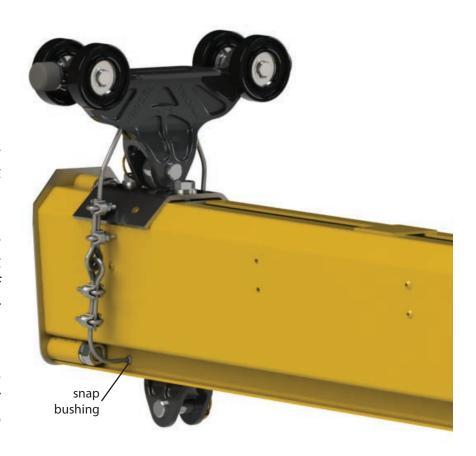

Note to installer: Make sure that all threaded connections internal or external have been treated with a locking agent such as Loctite[®]. Small 3/8" holes will need to be drilled thru the rail in order to allow the safety cable to pass thru and then re-attach back onto itself. The cable provided will pass thru the trolley/endtruck body through the designated arc shaped channel immediately above the hook. Please use the snap bushings for each hole drilled.

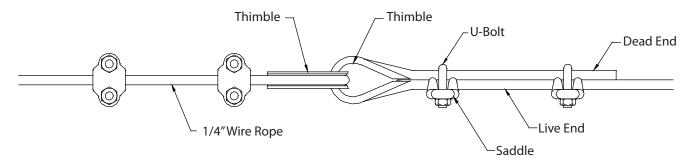

CAUTION

When assembling wire rope clamps to wire rope be sure the saddle part of the clamp is on the live end of the rope. The u-bolt part of the clamp should be on the dead end or short end of the rope.

Contents: Tools Required:

1 - 1/4" wire rope cables @ 55" Electric Drill
2 - Snap bushing* 3/8" drill bit
4 - 1/4" Cable clamps Wrench

2 - 1/4"Thimbles